

DigiMaster Speaker Storage

Quick guide



Speaker

- Place the DigiMaster Speaker bag with the zipper to your right
- Place the speaker in the bag all the way to the left (opposite side of zipper) and secure with velcro
- Place the pole next to the speaker and place the foot cap on the right side near the zipper



Speaker feet

- 1 Place the narrow end of one foot all the way to the right (zipper side)
- 2 Place the wide end of the next foot next to the wide end of the first foot
- 3 Place the narrow end of the third foot next to the narrow end of the second foot
- 4 Place the wide end of the fourth foot on the right side at the end of the speaker
Begin to gently zip the bag closed
- 5 Place the narrow end of the last foot next to the narrow end of the fourth foot
Continue to gently zip the bag



Accessories

- Place the remaining supplies in the outside pocket of the back

